



RELEASE NOTES

## MAC OS X DRIVER version 6.3.20-8

Released **January 19, 2017**

Supported on **Mac OS X 10.12, 10.11, 10.10**

### Created for these Wacom pen displays and pen tablets:

Wacom MobileStudio Pro	DTH-W1320, W1620
Wacom Cintiq Pro	DTH-1320, 1620
Wacom Intuos Pro	PTH-660, 860
Intuos	CTL-480, 680, 490, 690/CTH-480, 680, 490, 690
Intuos 4	PTK-440, 640, 840, 1240, 540WL
Intuos 5	PTH-450, 650, 850/PTK-450, 650
Intuos Pro	PTH-451, 651, 851
Cintiq 12WX	DTZ-1201W
Cintiq 13HD	DTK-1300/DTH-1300
Cintiq 21UX 2	DTK-2100
Cintiq 22HD	DTK-2200/DTH-2200
Cintiq 24H	DTK-2400/DTH-2400
Cintiq 27QHD	DTK-2700/DTH-2700
Cintiq Companion	DTH-W1300
Cintiq Companion 2	DTH-W1310
Cintiq Companion Hybrid	DTH-A1300
ExpressKey Remote	EKR-100
	DTU-1031
	DTU-1031X
	DTU-1141
	DTU-1631
	DTK-1651
	DTU-1931
	DTU-2231
	DTK-2241
	DTK-2242

## RELEASE NOTES MAC OS X DRIVER version 6.3.20-8

---

### WHAT'S NEW

---

New for Wacom Intuos Pro (PTH-660 and 860), you are now able to adjust the brightness of the LEDs on your pen tablet so that you can turn them off when you don't need them and make them brighter when you do.

***Here's how to try it:***

1. Open the **Wacom Tablet Properties**.
2. Select your tablet from the **Device** list.
3. Click **Options**.
4. Move the **Brightness Adjustment** slider until you are satisfied with the brightness of the LEDs.

## RESOLVED ISSUES

WHAT WAS AFFECTED?		HERE'S WHAT WAS RESOLVED.	
All devices	Two-finger pan	The issue where performance was slow and jittery when using two fingers on your device to pan in Photoshop CC 2017 is resolved.	
All devices	Pen	The issue where your pen would not work after you removed your settings is resolved.	
All devices	<b>Erase</b> function assigned to pen side switch	The issue where the pen side switch would not work as an eraser if you assigned the <b>Erase</b> function to it is resolved.	
All devices	Pinch to zoom touch function in Photoshop	The issue where the page in Photoshop would scroll instead of zoom when you pinched your fingers on your device is resolved.	
All devices	Pen in Illustrator	The issue where the pen would not work in Illustrator if you pressed an ExpressKey with pan/scroll assigned and then pressed an ExpressKey with SHIFT + TAB assigned is resolved.	
Cintiq Pro	DTH-1320 and 1620	Touch Key buttons labels	The issue where the labels for the Touch Key buttons were incorrect is resolved.
Wacom Intuos Pro	PTH-660 and 860	Device list	The issue where the same Wacom Intuos Pro pen tablet would display multiple times in the <b>Device</b> list in Wacom Tablet Properties is resolved.
Wacom Intuos Pro	PTH-660 and 860	Touch Ring	The issue where a keystroke assigned to the Touch Ring would repeat after you removed your finger from the Touch Ring is resolved.
Wacom Intuos Pro	PTH-660 and 860	Three-finger drag	The issue where using three fingers on your pen tablet to drag an item on your computer would not move the item is resolved.
Intuos Pro	PTH-451, 651, 851		
Intuos	CTL-480, 680, 490, 690 CTH-480, 680, 490, 690 PTH-450, 451, 650, 651, 850, 851 PTK-440, 450, 640, 650, 840, 1240, 540WL		

---

## KNOWN ISSUES

---

WHAT IS AFFECTED?		HERE'S WHAT YOU CAN EXPECT.
All devices	Pen with Mac OS X 10.12	<p>When you are using a pen with Mac OS X 10.12, your lines might be wavy.</p> <p><b><i>What we are doing about it:</i></b></p> <ul style="list-style-type: none"><li>• Wacom Engineers are currently working with Apple to resolve this issue. We will pass on more information as we have it.</li></ul>